

	<p>Flange: FL9030 Gasket: GK9030</p> <p>Motor: B16A DOHC 16v B18A DOHC 16v B18B DOHC 16v B18C DOHC 16v</p>
	<p>Flange: FL9031 Gasket: GK9031</p> <p>Motor: D13B, D13C SOHC D15B, D15Z SOHC D16AI, D16AZ 16v ZC, ZC-1 DOHC</p>
	<p>Flange: FL9033 Gasket: GK9033</p> <p>Motor: A16A SOHC 12v A18A SOHC 12v A20 SOHC 12v ES, ET, EY 12v</p>
	<p>Flange: FL9045 Gasket: GK9045</p> <p>Motor: B20A DOHC 16v B20A-5 DOHC 16v</p>
	<p>Flange: FL9065 Gasket: GK9065</p> <p>Motor: H22A DOHC</p>

	<p>Flange: FL9082 Gasket: GK9082</p> <p>Motor: F22A SOHC F22B SOHC + DOHC</p>
	<p>Flange: FL9088 Gasket: GK9088</p> <p>Motor: F18A, F18B SOHC 8v F20A SOHC + DOHC F20B SOHC</p>
	<p>Flange: FL9106 Gasket: GK9106</p> <p>Motor: EW SOHC 12v</p>
	<p>Flange: FL9171 Gasket: GK9171</p> <p>Motor: B18A SOHC 12v B20A-3 SOHC 12v</p>
	<p>Flange: FL9233 Gasket: GK9233</p> <p>Motor: G25A 5cyl SOHC</p>